


Installation Instructions Standard Honeycomb Shades

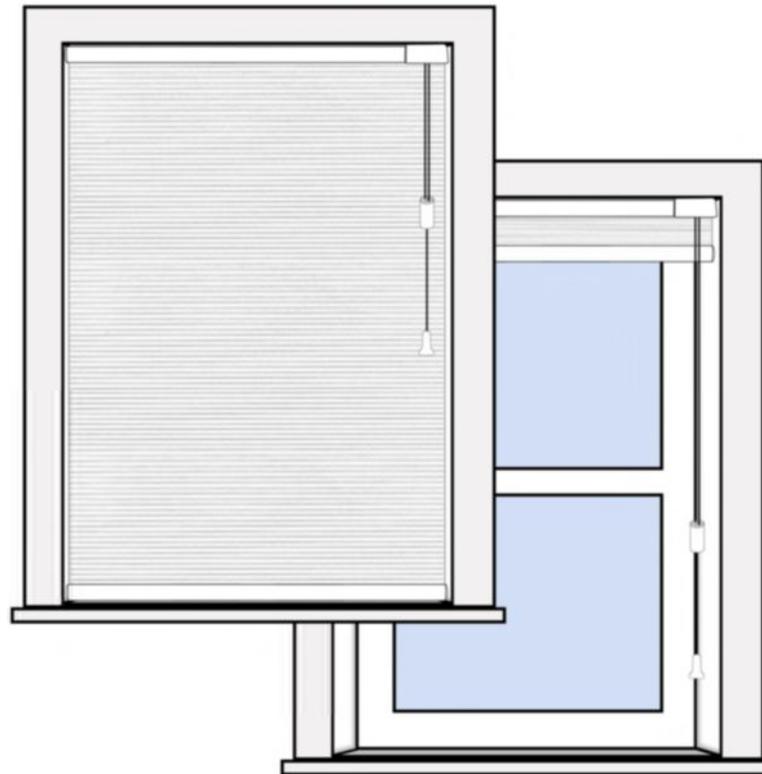

Installing Your New Honeycomb Shades

Please take a moment to review the contents of your parts package.

Your parts package should contain the following:

- 1) Installation Brackets
- 2) Mounting Screws
- 3) Cord Cleats (Std Lift only)

Optional hardware (available on request):


- Side Mount brackets
- Spacer blocks or extension brackets
- Hold downs

Before Mounting the Shade:

If your shade was ordered for inside mount installation, make sure the window is even or level, or the shade will not operate properly after installation. Shims may be required to make sure the shade headrail is even.

If installing outside mount, make sure the brackets are even and level, so that the shade will operate properly. Also, make sure that the shade is the proper length to cover the window, and that it will clear any obstructions.

The brackets included with your hardware package are universal, and can be used for inside mount, ceiling mount or outside mount installation. (Fig 1)

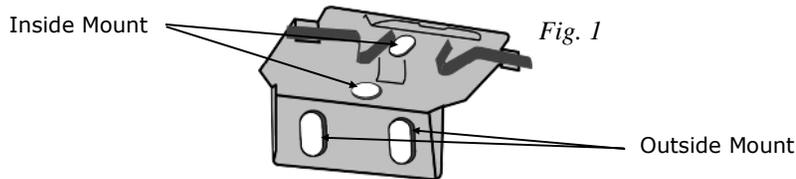


Shade Width	Brackets Needed
Up to 40"	2
41" - 72"	3
73" - 85"	4
86" and Up	5

Mounting the Brackets:

The appropriate number of brackets for your shade size will be included. The end brackets should be mounted with the center of the bracket approximately 2 1/2" from the end of the headrail. Additional brackets should be evenly spaced between the two end brackets.


Inside Mount:

Mount the bracket against the top inside frame surface, using the mounting screws, and the holes at the top of the bracket, with the screw holes 2 1/2" from the side frame. (Fig 2)

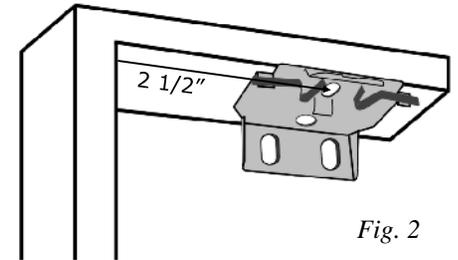

Outside Mount:



Mount the bracket against the wall or window molding. Attach to the mounting surface using the mounting screws and the holes at the back of the bracket. (Fig 3)

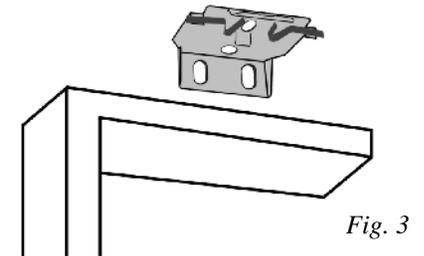

Mounting the Shade:

With the brackets in place, insert the front clip of the bracket into the front groove on the top of the headrail. (Fig 4a)

Push the headrail back towards the window, then tilt the back of the headrail up into the bracket, until the back clips are inserted into the back groove of the headrail. Snap into place and release. (Fig 4b)

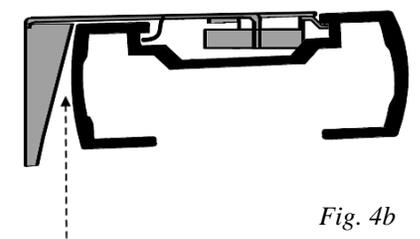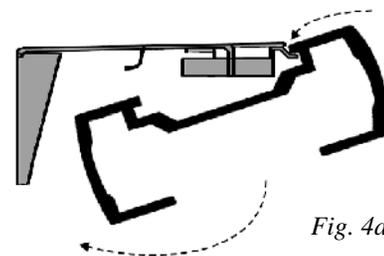

Optional Hold Down Bracket:

Hold down brackets may be used to anchor the bottom of the shade to prevent it from swaying when installed on doors.

With the shade fully lowered, place the pin end of the bracket into the hole in the end cap of the bottom rail. Place the end of the bracket against the outside frame of the window, and mark the screw holes.

Raise the shade, and using the short screws, attach the bracket to the frame. Fig 5a) Mount the hold down bracket to the bottom of the window frame, using two screws.

Lower the shade, and insert the peg on the bracket into the hold in the bottom rail end cap. (Fig 5b)

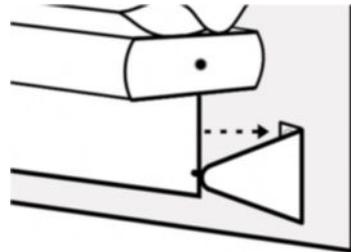


Fig. 5a

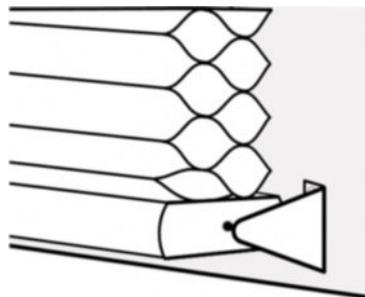


Fig. 5b

Operating your Shade:

To raise the shade, grab the lift cord, and pull straight down, then angle the cord to the outside of the window frame. (Fig 6a)

To release, pull the lift cord down and angle to the inside of the shade. (Fig 6b)

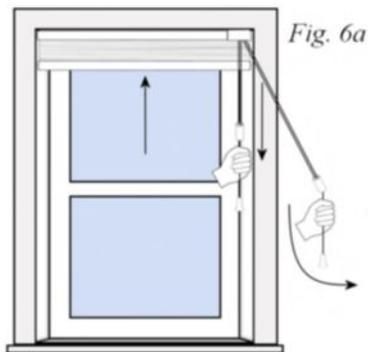


Fig. 6a

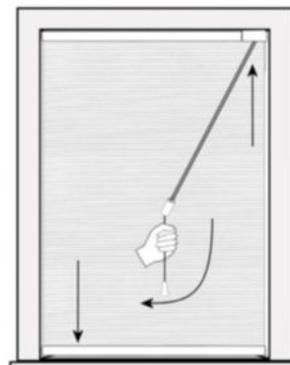


Fig. 6b

Optional Side Mount Brackets:

When installing in a window with no top frame (Often arch tops), a Side Mount Bracket may be necessary for installation. Line up the bracket top with the desired height at the top of the headrail.

Mark holes for the screws (Use bugle-head screws). Both brackets must be level. Remove the brackets, and drill holes. (Fig 7) Insert the screws. Approximately 1/8" of the screw should be protruding. (Fig 8)

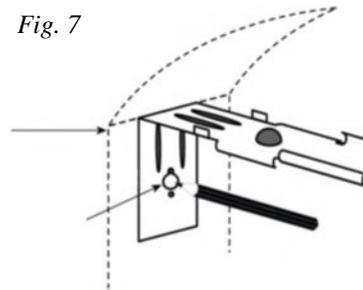


Fig. 7

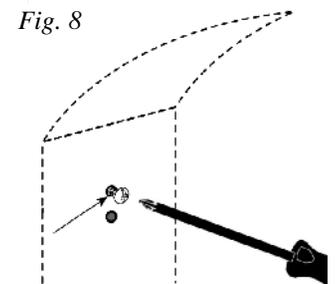


Fig. 8

Carefully pull the cord lock assembly partially out of the headrail, and slide the bracket into the channel. Push the cord lock assembly back into place, sliding the bracket all the way into the headrail. (Fig 9)

Repeat this step with the end cap on the opposite end of the headrail.

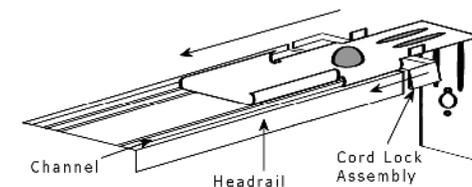


Fig. 9

Hook one bracket onto the screw on the corresponding side of the window frame. Swing the other end of the shade into place, and bring the bracket into place over that screw.

Bend the bracket inward until the screw engages in the keyhole slot.

Pull both brackets downward on the screws, so that the keyhole slot is all the way down, with the screw in the top, smaller opening in the keyhole. Add a screw to the bottom hole of both brackets to secure, make sure to tighten all screws. (Fig 10)

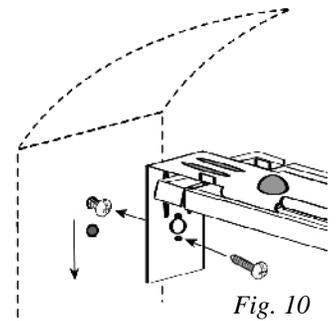


Fig. 10

Caring For Your Honeycomb Shade

The quality materials used in manufacturing your blind or shade require minimal care to maintain their appearance for several years. Here are some simple tips to keep your window coverings looking their best.

Honeycomb fabrics are easily cared for with regular dusting. A soft vacuum cleaner with a soft brush attachment, will remove deeper dirt and dust. When cleaned regularly, surface dust is easily removed.

In the event a spot or stain occurs on your Honeycomb Shade fabric, most fabrics are durable enough for cleaning. However, it is recommended you spot test a small hidden area of the shade before proceeding.

Gently blot stains with a soft clean cloth lightly dampened with water. Do not use harsh chemicals or cleaning agents, as this may cause permanent discoloration of the fabric.



Child Safety - Standard Lift Shades

Young children can STRANGLE in cord loops and in the loop above the cord stop. They can also wrap cords around their necks and STRANGLE. In addition, inner cords can pull out to form a loop, which can STRANGLE a young child.

- Always keep cords out of children's reach.
- Move cribs, playpens, and other furniture away from the windows, so a child cannot reach the operating cords.
- Do not tie cords together. Make sure cords do not twist together to create a loop.



Child Safety:


Century Blinds Inc. manufactures its products in accordance with ANSI/WCMA recommendations for Child Safety.

To help prevent children from becoming tangled in lift cords, all blinds or shades made with standard lift operation come with a Safety Breakaway on each shade lift cord, which separates into two pieces when pressure is applied between the cords. If your Breakaway is pulled apart, simply snap the two halves back together.

For increased safety, also included in your installation package are Cord Cleats, used to anchor the lift cord to the wall when the blind or shade is raised.

Mount the Cord Cleats to the side of the window frame, at a height where they will be out of reach for children. When the blind or shade is raised, wrap the lift cord around the Cord Cleats to anchor it safely.

Safety Breakaway

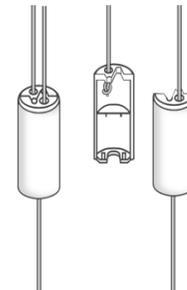

Cord Cleats



The Window Covering Safety Council (WCSC) and the U.S. Consumer Product Safety Commission (CPSC) are urging parents and caregivers to check their window coverings for exposed or dangling cords that can pose a strangulation hazard to infants and young children, and to retrofit or replace them with today's safer products. WCSC and CPSC recommend that only cordless window coverings or those with inaccessible cords be used in homes with young children.